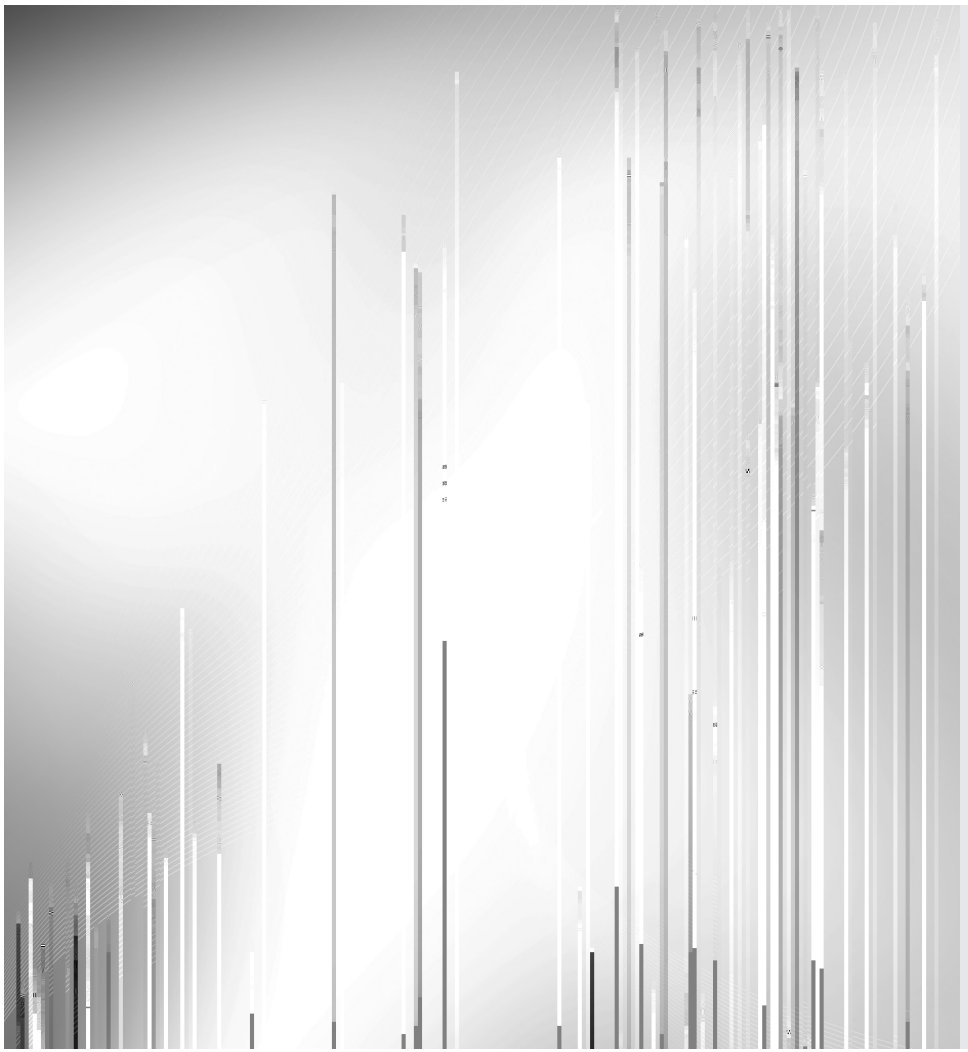

MS23F301T**
MS23F302T**

imagine the possibilities

- WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand WKH KD]DUGV LQYROYHG &KLOGUHQ VKDOO QRW SOD\ ZLWK WKH DSSOLDQFH &OHDQLQJ DQG user maintenance shall not be made by children unless they are aged from 8

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- &KLOGUHQ VKRXOG EH VXSHUYLVHG WR HQVXUH that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly quali ed persons in order to avoid a hazard.
- WARNING: Liquids or other foods must not be heated in sealed containers since they are liable to explode;
- The appliance should not be cleaned with a water jet.
- This oven should be positioned proper direction and height permitting easy access to cavity and control area.
- Before using the your oven rst time, oven should be operated with the water during 10 minute and then used.
- If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
- The microwave oven has to be positioned so that plug is accessible.
- The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING
(Oven function only) - Optional

- WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- During use the appliance becomes hot. &DUH VKRXOG EH WDNHQ WR heating elements inside the oven.
- WARNING: Accessible parts may WDNHQ

2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

DO NOT spill water in the vents.NEVER use any abrasive products or chemical solvents.Take particular care when cleaning the door seals to ensure that no particles:

- a $ F F X P X O D W H
- a 3 U H Y H Q W W K H G R R U I U R P F O R V L Q J F R U U H F W O \

Clean the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45° and clean it.

(Swing heater model only)

STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- a % U R N H Q K L Q J H
- a ' H W H U L R U D W H G V H D O V
- a ' L V W R U W H G R U E H Q W R Y H Q

Only a quali ed microwave service technician should perform repair.

NEVER remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- a 8 Q S O X J L W I U R P W K H Z D O O
- a & R Q W D F W W K H Q H D U H V W D I V centre

If you wish to store your oven away temporarily, choose a dry, dustfree place.
Reason : Dust and damp may adversely a ect the working parts in the oven.

Do not turn the appliance o by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
Do not insert ngers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
Ensure that the power voltage, frequency and current are the same as those of the product				

Do not store ammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their ngers in the door.	✓	✓	✓	✓
WARNING: Microwave heating of beverages can result in delayed eruptive boimp.103 -2s can Microwave heating of beverages can				

Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.(MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use rst with a damp cloth and then with a soft dry cloth.

(c) Do NOT operate the oven if it is damaged until it has been repaired by a quali ed microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:

(1) door (bent)

(2) door hinges (broken or loose)

(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly quali ed microwave service technician trained by the manufacturer.

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

D $ 'HQWHG 6FUDWFKHG RU %URNHQ 'RRU +DQG Panel.

E $ %URNHQ RU PLVVLQJ 7UD\ *XLGH 5ROOHU &R

a 8VH WKLV DSSOLDQFH RQO\ IRU LWV LQWHQGHG instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.

a %HFDXVH WKHVH IROORZLQJ RSHUDWLQJ LQVWU the characteristics of your microwave oven may di er slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or nd help and information online at www.samsung.com.

a 7KLV PLFURZDYH RYHQ LV VXSSRVHG IRU KHDWL domestic home-use only. Do not heat any type of textiles or cushions lled with grains, which could cause burns and re. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.

a)DLOXUH WR PDLQWDLQ WKH RYHQ LQ D FOHDQ F deterioration of the surface that could adversely a ect the life of the appliance and possible result in a hazardous situation.

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government o ce, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

CONTENTS

QUICK LOOK-UP GUIDE

If you want to cook some food.

1. Place the food in the oven.
   Select the power level by pressing the Microwave (🍲) button one or more times.

2. Select the cooking time by turning the dial knob as required.

3. Press the Start/+30s (◇) button.

   Result : & R R N L Q J V W D U W V 7 K H R Y H Q E H H S V times when cooking is over.

If you want to auto Power defrost some food.

1. Place the frozen food in the oven.
   Select the type of food that you are cooking by pressing the Power defrost (❄) button one or more times.

2. Select the weight by turning the dial knob as required.

3. Press the Start/+30s (

ENGLISH

OVEN

1. DOOR HANDLE
2. VENTILATION HOLES
3. LIGHT
4. DISPLAY
5. '225 /$7&+(6
6. DOOR
7. TURNTABLE
8. &283/(5
9. ROLLER RING
10. 6$)(7< ,17(5/2&. +2/(6
11. &21752/ 3$1(/

CONTROL PANEL

1.

ACCESSORIES

HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without the foods form or colour changing.

You can use your microwave oven to:

- a Defrost (manual & auto)
- a &RRN
- a Reheat

&RRNLQJ 3ULQFLSOH

1. The microwaves generated by the magnetron are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to D GHSWK RI DERXW LQFK FP &RRNLQJ WKHQ continues as the heat is dissipated within the food.
3. &RRNLQJ WLPHV YDU\ DFFRUGLQJ WR WKH UHFLSLHQW XVHG and the properties of the food:
   - a Quantity and density
   - a Water content
   - a Initial temperature (refrigerated or not)

   As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times speci ed in recipes and in this booklet must therefore be respected to ensure:

   - a (YHQ FRRNLQJ RI WKH IRRG ULJKW WR WKH FHQWUH
   - a 7KH VDPH WHPSHUDWXUH WKURXJKRXW WKH IRRGeP 0

COOKING/REHEATING

The following procedure explains how to cook or reheat food.
ALWAYS check your cooking settings before leaving the oven unattended.
First, place the food in the centre of the turntable. Then, close the door.

1. Press the Microwave ( ) button.

   Result : The 800 W (maximum cooking power) indications are displayed:
   Select the appropriate power level by pressing the Microwave ( ) button again until the corresponding wattage is displayed. Refer to the power level table.

2. Set the cooking time by turning the dial knob.

   Result : The cooking time is displayed.

3. Press the Start/+30s ( ) button.

   Result : The oven light comes on and the turntable starts rotating.

   & R R N L Q J V W D U W V D Q G Z K H Q L W K D V nished the oven beeps 4 times.
   2) The end reminder signal will beep 3 times. (once every minute)
   3) The current time is displayed again.

Never switch the microwave oven on when it is empty.

If you wish to heat a dish for a short period of time at maximum power (800 W), simply press the +30s button once for each 30 seconds of cooking time. The oven starts immediately.

POWER LEVELS

You can choose among the power levels below.

Power level	Output
HIGH	800 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST	

SETTING THE ENERGY SAVE MODE

The oven has an energy save mode. This facility saves electricity when the oven is not in use. Normal condition is standby mode and show clock when not using.

a Press the Energy Save ( ) button.
Result : Display o .

a To remove energy save mode, open the door and then display shows current time. The oven is ready for use.

USING THE DEODORIZE FEATURE

Use this feature after cooking odorous food or when there is a lot of smoke in the oven interior. First clean the oven interior.

Press the Deodorization (

Code	Food	Portion (g)	Standing time (min.)	Recommendations
3	Green Beans	250	1-2	Rinse and clean green beans.

Code	Food	Portion (g)	Standing time (min.)	Recommendations
4	Fresh Salmon Filet	300 (2 pcs)	1-2	Rinse sh and put on a ceramic plate, add 1 tablespoon lemon MXLFH &RYHU ZLWK PLFURZDYH cling lm. Pierce lm. Put dish on turntable.
5	Fresh Prawns	250	1-2	Rinse prawns on a ceramic plate, add 1 tablespoon lemon juice. &RYHU ZLWK PLFURZDYH FOLQJ 1OP Pierce lm. Put dish on turntable.
6	Fresh Trout			

Food	Portion	Power levels	Cooking time (min.)	Standing time (min.)	Handling
Fruit compote	250 g	800 W	3-4	2-3	Bowl + Lid
	Instructions Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into steam bowl. Add 1-2 W D E O H V S R R Q V Z D W H U D Q G W E V S				

Handling of power steam cooker

35(&$87,216

Take special care when opening the lid of your steamer, because the steam escaping may be very hot.

Use oven gloves when handling after cooking.

USING THE MEMORY FEATURE

If you often cook or reheat the same types of dishes, you can store the cooking times and power levels in the oven's memory, so that you do not have to reset them each order.
You can store two di erent setting.

Storing the settings.

1. To programme the... Then press the ( )
2. Set your cooking programme as usual (power level and cooking time) see if necessary.
3. Press the (◊) button.

   Result : Your setting are now stored in the oven's memory.

USING THE MEMORY PROGRAMMES

V X J D U & R Y H U Z L W K O L G

First, place the food in the centre of the turntable and close the door.

1. To select the... Then press the ( ) button

   First setting — Once (Display is P1)
   Second setting — Twice (Display is P2)
2. Press the (◊) button.

   Result : The food is cooked as requested.

SWITCHING THE BEEPER OFF

You can switch the beeper o whenever you want.

1. Press the (▽) and (◊) buttons at the same time.

   Result :

   a 7 K H I R O O R Z L Q J L Q G L F D W L R Q L V G L V S O D
   a 7 K H R Y H Q G R H V Q R W E H H S H D F K W L P H

   you press a button.
2. To switch the beeper back on, press the(▽) and (◊) buttons again at the same time.

   Result :

   a 7 K H I R O O R Z L Q J L Q G L F D W L R Q L V G L V S O D

   a 7 K H R Y H Q R S H U D W H V Z L W K W K H E H H S H U

ENGLISH

SAFETY-LOCKING YOUR MICROWAVE OVEN

<RXU PLFURZDYH RYHQ LV 1WWHG ZLWK D VSHFLDO &KLOG 6DIHW\ SURJUDPPH ZKLFK enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.
The oven can be locked at any time.

1. Press the (

cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in di erent ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling lm.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for frozen vegetables

| | | |

Food	Portion (g)	Power (W)	Time (min.)	Standing time (min.)	Instructions
Mixed vegetables (chinese style)	300	600	8-9	2-3	Add 15 ml (1

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide.
The times in the chart consider liquids with a room temperature of about
W R “ & R U D F K L O O H G I R R G Z L W K D W H P S H U D W X

ENGLISH

Arranging and covering
Avoid reheating large items such as joint of meat – they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring
Some foods can be reheated using 800 W power while others should be reheated using 600 W, 450 W or even 300 W.
& K H F N W K H W D E O H V I R U J X L G D Q F H , Q J H Q H U D O L W
lower power level, if the food is delicate, in large quantities, or if it is likely to
1sing 600lup 8 33348>]TJ /Span<</ActualText<FEFF0020>>> BDC <0003>Tj E9>Tj -kT1_

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been

MANUAL DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.
Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.
Put the frozen food on a dish without cover. Turn over half way, drain o any liquid and remove any giblets as soon as possible.
&KHFN WKH IRRG RFFDVLRQDOO\ WR PDNH VXUH WKD

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Poultry				
& K L F N H Q S L H F H V	500 g (2 pcs)	14½-15½	15-40	First, put chicken pieces rst skin-side down,
Whole chicken	900 g	28-30		whole chicken rst breast-side-down on a at ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
Fish				
Fish lets	250 g (2 pcs)	6-7	5-15	Put frozen sh in the middle of a at ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time!
	400 g (4 pcs)	12-13		

6 3 (& , $ / + , 1 7 6

MELTING BUTTER
3 X W b J E X W W H U L Q W R D V P D O O G H H S J O D V V G L V K
Heat for 30-40 seconds using 800 W, until butter is melted.

MELTING CHOCOLATE
Put 100 g chocolate into a small deep glass dish.
Heat for 3-5 minutes, using 450 W until chocolate is melted.
Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY
Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W until honey is melted.

MELTING GELATINE
Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W.
Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)
Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.
& R R N X Q F R Y H U H G L Q D J O D V V S \ U H [E R Z O I R U y W R
until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM
Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well.
& R R N F R Y H U H G I R U P L Q X W H V X V L Q J b :
Stir several times during cooking. Empty directly into small jam glasses with twist-o lids. Stand on lid for 5 minutes.

COOKING PUDDING
Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex
E R Z O Z L W K O L G & R R N F R Y H U H G I R U y W R y P L Q X W H
Stir several times well during cooking.

BROWNING ALMOND SLICES
Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

COOKING INSTRUCTIONS ON FOOD PACKAGING

Microwave Symbols

On the front of your oven there is a microwave oven symbol, as shown below.

This symbol has been introduced for your bene t when cooking or reheating packaged food.

Packaged food is also, increasingly, using a microwave symbol similar to the one below. When you see this

Symbol on food packaging, the cooking instructions are based on either the ,(& 3RZHU 2XWSXW 5DWLQJ RU WKH 5HKHDWLQJ &DWHJRULHV $ % & ' RU (